


## How do I set a NTP server on my gateway to keep my time in sync

### Configure at system

Navigate to Admin GUI: System > Settings > Date & Time

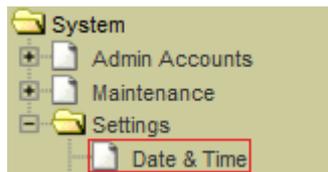

Retrieve time from NTP server

Server

\* Date Format  e.g. 16/10/2014

Current Date & Time  
Date   
Time

\* New Date & Time  
Date  e.g. 16/10/2014   
Time  e.g. 02:26PM

Time Zone  >   
Changing the system time zone requires a system restart

Click  to confirm the changes.

Modify system Date Time Successfully

**Additional Note:**

- Date Format – Choose the date format you want to use.
- New Date & Time – Specify the updated date and time here.
- Time Zone – Specify the time zone that the gateway is in. You will need to restart the gateway.
- Retrieve time from NTP server – The gateway supports Network Time Protocol (NTP) to automatically synchronize the internal clock with an external time server.
- IP Address – NTP server IP address.